

EM-4020 / EM-4040

EM-4020A / EM-4040A

 Power cable 2M/4M/6M/8M  
 Signal cable 2M/4M/6M/8M  
 EMCD-4000 / EMCD-4000S

 Power cable 2M/4M/6M  
 Signal cable 2M/4M/6M  
 EMCD-4000 / EMCD-4000S

E4000 CONTROLLER



AL-C1204

# Specifications

**DXF data** DXF files are available on our website

Order by Code No.

## NR4040-AQC

 Code No. **9219** Model **NR4040-AQC**

O.D.	Spindle Accuracy	Max. rpm	Air for collet opening	Weight
Ø40mm	Within 1µm	40,000min <sup>-1</sup>	0.55 ~ 0.6MPa	2,160g
Motors			Collet holders	
EM-4020 · EM-4020A · EM-4040 · EM-4040A			QC5-16 / QC5-16-R (For collet CH16)	QC5-K / QC5-K-R (For collet CHK)

Standard Accessories Wrench (36) : 1pc. / Air hose with filter (K-251) : ø6mm × 2m

## Parts (Optional)

Collet	You can choose the I.D. size (The following is an example of ø6.0mm.)		Collet holder (With collet nut) QC5-16/K QC5-16/K-R		Wrench
<b>CH16</b> I.D. ø3.0mm~10.0mm p.29	Code No.	931 6 0	9216	9225	2083
	Model	CH16- 6 . 0 (I.D. ø6.0mm)	QC5-16 (For collet CH16)	QC5-16-R (For collet CH16)	Wrench 17 × 22 (2pcs.)
<b>CHK</b> I.D. ø0.5mm~6.35mm p.29	Code No.	915 6 0	9215	9224	2026
	Model	CHK- 6 . 0 (I.D. ø6.0mm)	QC5-K (For collet CHK)	QC5-K-R (For collet CHK)	Wrench 12 × 14 (2pcs.)

 In case using a Preset adapter, only 1pc. wrench is used.  
 CH16 collet → 17 × 22 wrench (1pc.) / CHK collet → 12 × 14 wrench (1pc.)

### Preset adapter (QC5-16/QC5-K)



※ Holding section size is ø20.

 Code No. **9218**


 Model **QC5-16 ADP**  
(For collet QC5-16)

 Code No. **9217**

 Model **QC5-K ADP**  
(For collet QC5-K)

## Set-up outside machines

In case using a milling holder

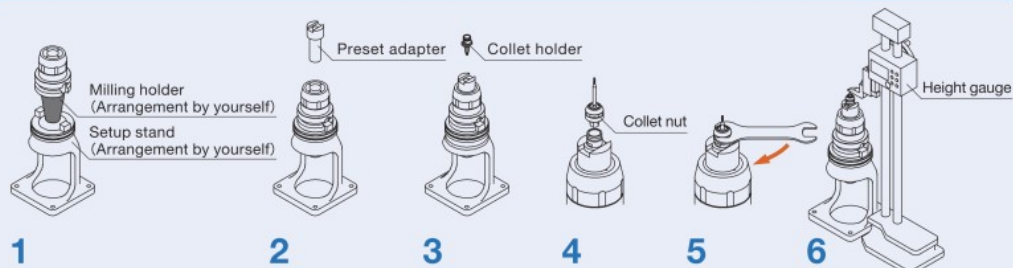

## Set-up outside machines

In case using a vice

