
AK Type Support Unit



Square Type for Fixture

Please, download CAD DATA from www.sungilfa.com

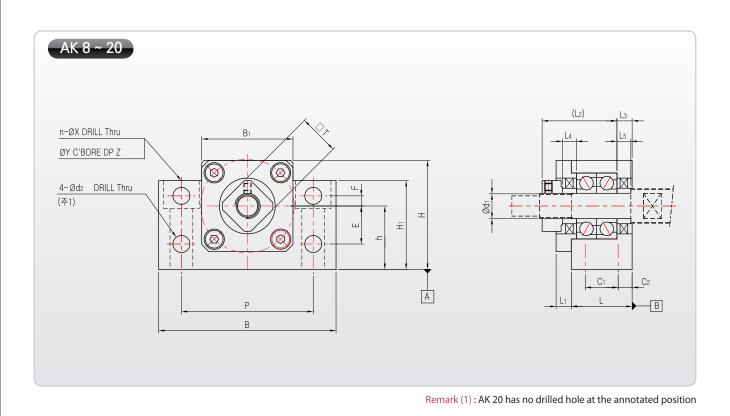

Note

1. The surfaces A and B are reference for installation. Please, use the accurate size spacer if adjusting height is necessary.

- 2. Do not disassemble the support unit since the preload of the bearing has already been adjusted.
- 3. Appropriate amount of grease is filled in the bearing of fixed-side support unit.
- 4. Please refer to page 66 about bearing type and characteristic according to Support Unit grade
- 5. Please refer to page 86 for fastening torque of the lock nut.

Model No.	dı	L	Lı	L2	Lз	В	н	h±0.02	Bı	Hı	E	F	Р	C1	C2	d2		х	Y	Z	Colla L₄	r Size L₅	□T	Mass (g)
AK8	8	20	3	24	4	52	32	17	25	26	10	4	38	-	10	5.5	2	6.6	11	12	4	4	14	190
AK10	10	24	6	29.5	6	70	43	25	36	35	15	4	52	-	12	6.6	2	9	14	11	5.5	5.5	16	450
AK12	12	24	6	29.5	6	70	43	25	36	35	15	4	52	-	12	6.6	2	9	14	11	5.5	5.5	19	440
AK15	15	25	6	36	5	80	50	30	41	40	15	4	60	_	12.5	6.6	2	11	17	15	10	10	22	570
AK20	20	42	10	50	10	95	58	30	56	45	-	-	75	22	10	-	4	11	17	15	11	11	30	1400

Unit : mm