


CP721

FLEX LOCATOR PINS

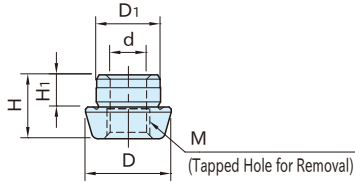


Body
Steel(SCM440) ISONITE Treated (Nitrocarburized)

Part Number	D ₁ (p6)	H ₁	D	H	M	d	Weight (g)	Proper Flex Locator Bushings
CP721-12025	12	4.5	15	10	M10×1.5 Depth3.5	8.5	6	CP726-12025
CP721-15032	15	7.5	20	15	M12×1.75Depth4.5	10.2	16	CP726-15032
CP721-20045	20	10	30	20	M16×2 Depth5.5	14	47	CP726-20045




How To Use

■ Mounting Hole Dimensions for Press Fit

Installation of the Flex Locator Pins on the Fixture Plate

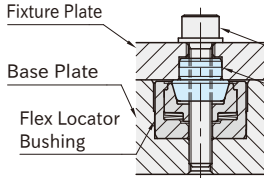

Installation of the Flex Locator Pins on the Base Plate

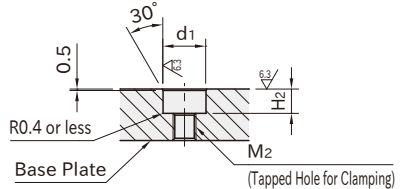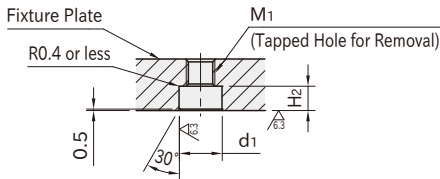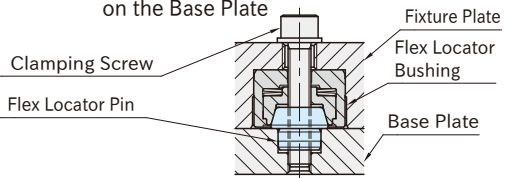

■ Spacing Tolerance



Part Number	d ₁ (H6)	H ₂	M ₁	M ₂
CP721-12025	12	5.5	M 8×1.25	M 6×1
CP721-15032	15	8.5	M10×1.5	M 8×1.25
CP721-20045	20	11	M14×1.5	M12×1.75

Reference

- Mechanism of FLEX LOCATORS
- How To Install FLEX LOCATORS (Through)
- How To Use FLEX LOCATORS (Through)