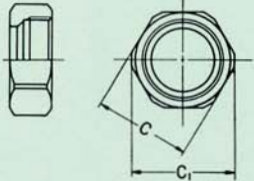
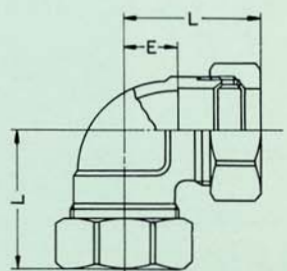
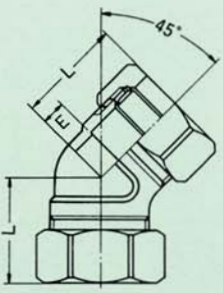
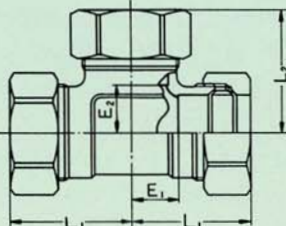

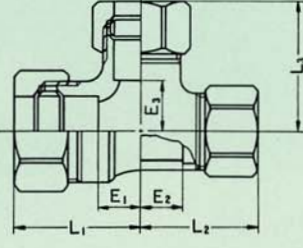
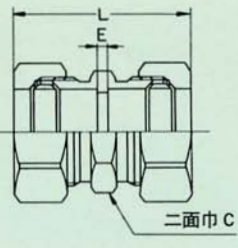
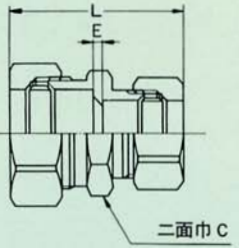
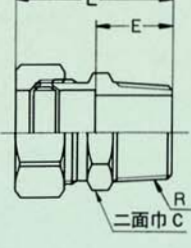


5サイズ MRジョイント II

袋ナット(MRJ II)				エルボ(MRJ II-L)			45°エルボ(MRJ II-45°L)									
																
呼び SU	C	C ₁	角数	呼び SU	L	E	呼び SU	L	E							
13	24	27	6	13	34	11	13	27	4							
20	32	36	6	20	38	14	20	30	6							
25	41	47	6	25	45	18	25	34	7							
チーズ(MRJ II-T)					径違いチーズ(MRJ II-RT)					径違いチーズ(MRJ II-RT)						
																
呼び SU	L ₁	L ₂	E ₁	E ₂	呼び SU	L ₁	L ₂	E ₁	E ₂	呼び SU	L ₁	L ₂	L ₃	E ₁	E ₂	E ₃
13	34	34	11	11	20×13	36	38	12	15	20×13×13	36	34	38	11	11	15
20	38	38	14	14	25×13	39	40	12	17	25×20×20	42	38	41	15	14	17
25	45	45	18	18	25×20	42	41	15	17							
ソケット(MRJ II-S)					径違いソケット(MRJ II-RS)					おすアダプター(MRJ II-AP)						
																
呼び SU	L	E	C	本体角数	呼び SU	L	E	C	本体角数	呼び SU-B	L	E	R	C	本体角数	
13	48	2	22	6	20×13	49	2	30	6	13×1/2	43	20	1/2	22	6	
20	50	2	30	6	25×13	52	3	36	6	20×3/4	47	23	3/4	30	6	
25	55	3	36	6	25×20	53	3	36	6	25×1	53	26	1	36	6	